


## IRt/c SETUP WITH AUTO-TUNE TEMPERATURE CONTROLLERS

In many applications, heating elements are employed to heat a product in an oven, furnace, or with jets of hot air. Conventional control devices using contact thermocouples measure and control the oven air temperature, IR heating element temperature, or air jet temperature in an effort to maintain product temperature and therefore, quality; often with less than satisfactory results.

Replacing the contact thermocouple (for example, measuring oven temperature) with a non-contact IRt/c measuring product temperature directly will insure that product temperature is maintained. Some readjustment of the controller parameters is required because of differences in sensor response times (an IRt/c is much faster) and time required to heat the product compared to the original sensor (slower). After installing the IRt/c and calibrating the controller reading using a

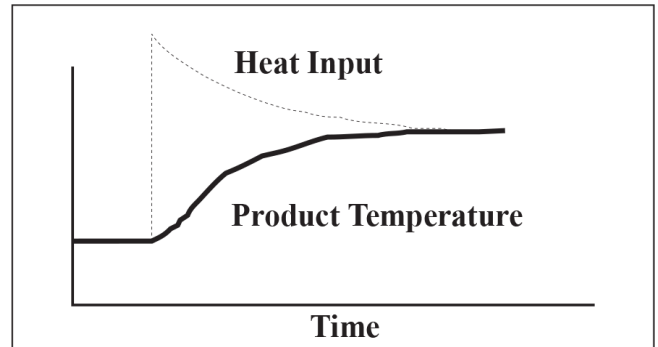

Microscanner D-Series (see Tech Note #1), initiate the self-tuning cycle of the controller and check to see that the control is stable and accurate. If it will not self tune properly, manually adjust the control coefficients to achieve stable control. Because the product temperature is likely to change temperature more slowly than the original sensor, start with slowly increasing the “D” of the PID coefficients.

### Exergen Corporation office:

USA  
400 Pleasant Street  
Watertown, MA 02472  
Tel: +1 617 923 9900 press 4 for industrial  
Fax: +1 617 923 9911

### Exergen Industrial International/OEM Sales office:

Clever IR  
The Netherlands  
Pastoor Clercxstraat 26  
5465 RH Veghel  
Tel: +31 (0)413 376 599

industrial@exergen.com  
www.exergen.com