


IRt/c MONITORS PLASTIC INJECTION MOLD CLEARING

In high volume plastic injection molding machinery, a molded part that does not clear the mold can cause serious problems, including a long down time to clean up or make repairs.

A particularly useful property of the mold is its shininess, which means low emissivity. Accordingly, the infrared radiation from an open mold is primarily reflected from the room, and thus an IRt/c pointed at the mold would not read much higher than room temperature. However, if a part is still in the mold, the IR radiation is far higher since the high emissivity of the plastic part is easily seen by the IRt/c as the temperature of the hot part. By mounting an IRt/c so that it can view the part as the mold opens, a reliable and inexpensive part detection system can be installed. Simply connect the IRt/c to a simple thermocouple controller with alarms interfaced to the mold position. For efficient coverage of the mold, two IRt/c's can be wired in parallel and

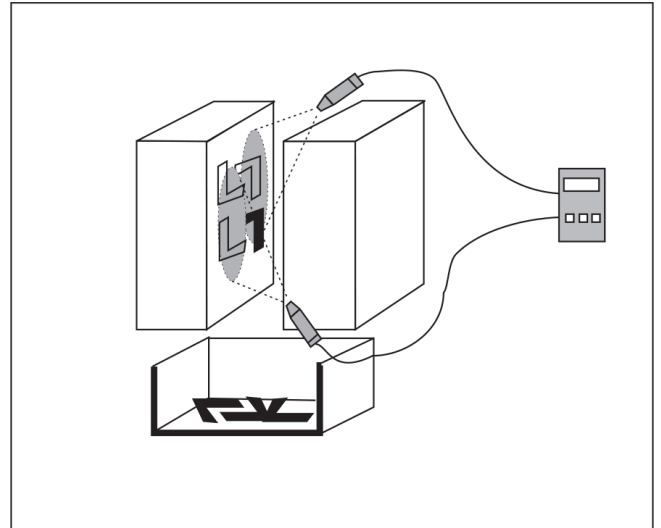

connected to a single controller, so that a part viewed by either sensor will alarm.

For harsh environments, the IRt/c.3x or IRt/c.5 models with narrow field-of-view and built-in air purge are recommended.

Exergen Corporation office:

USA
400 Pleasant Street
Watertown, MA 02472
Tel: +1 617 923 9900 press 4 for industrial
Fax: +1 617 923 9911

Exergen Industrial International/OEM Sales office:

Clever IR
The Netherlands
Pastoor Clercxstraat 26
5465 RH Veghel
Tel: +31 (0)413 376 599

industrial@exergen.com
www.exergen.com