

EASY UPGRADE OF EXISTING TEMPERATURE CONTROL SYSTEMS WITH IRt/c AND t/c.XMTR


- Replace conventional infrared sensing systems for superior accuracy, reliability, and low cost.
- Replace contact temperature sensors for noncontact measurement of actual product temperature instead of oven temperature.
- Retrofit using existing PLC analog inputs (4-20 mA, 0-5 V, 0-10 V).

The t/c.XMTR is specifically designed to make replacement or retrofit simple and inexpensive:

- In-line t/c.XMTR design is only slightly larger than the cable and requires no mechanical support.
- Precalibrated for thermocouple type and temperature range eliminates all adjustments, requirements for simulators, etc.

**For OEM's, IRt/c's and t/c.XMTR can be factory supplied wired together.*

- Hermetically sealed stainless steel construction is suitable for the harshest service without any additional packaging.
- Use any existing wiring, including thermocouple, RTD, etc.

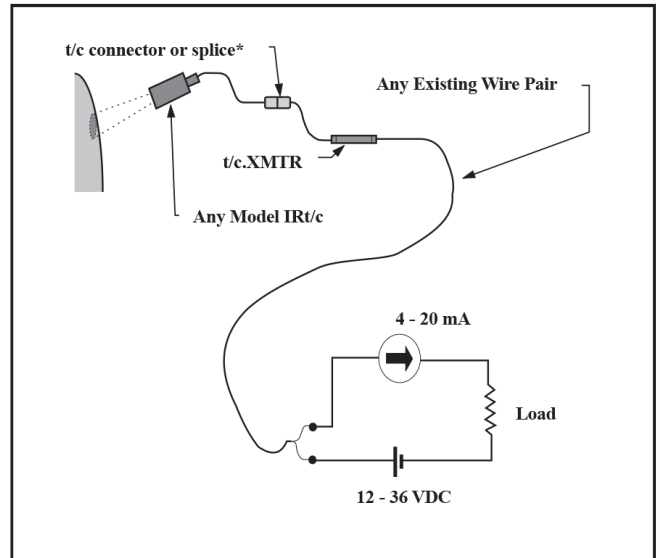

The t/c.XMTR is specifically designed to interface to any model IRt/c (or any conventional thermocouple) by a simple thermocouple connector or splice. The 2-wire current loop can be used in any conventional current loop, 0-5V, or 0-10V circuit that is scaled for the temperature range of interest.

Exergen Global offices:

USA
400 Pleasant Street
Watertown, MA 02472
Tel: +1 617 923 9900 press 4 for industrial
Fax: +1 617 923 9911

The Netherlands
Pastoor Clercxstraat 26
5465 RH Veghel
Tel: +31 (0)413 376 599
Fax: +31 (0)413 379 310

industrial@exergen.com
www.exergen.com