


## AIR PUMP ACCESSORY KEEPS IRt/c'S CLEAN AND COOL

For IRt/c installations in which a purge air source is not convenient, or is too expensive to install, 3rd party air pump kits are ideal. Most air pumps are rated for continuous duty and produce 120 cubic inches/ minute (2000 cc/min) air flow, which is more than sufficient for purging; and will cool an IRt/c.3x in environments up to 240°F (115°C). And most pumps are available in both 120 VAC and 12V DC versions.

Air Pump Kits are recommended for installations in which dust, dirt, or vapors are present which might coat the IRt/c lens, or for situations in which long term operation has been a problem due to fouling of the lens. At less than \$100; requiring

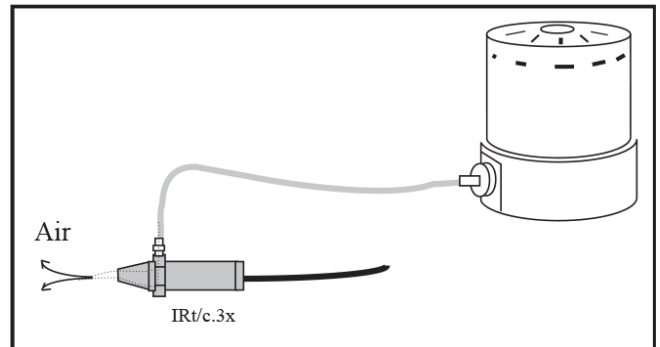

only a few minutes to install; and its small size; Air Pump Kits provide you a convenient and inexpensive assurance of long term, trouble-free operation of your IRt/c temperature control system.

### Exergen Corporation office:

USA  
400 Pleasant Street  
Watertown, MA 02472  
Tel: +1 617 923 9900 press 4 for industrial  
Fax: +1 617 923 9911

### Exergen Industrial International/OEM Sales office:

Clever IR  
The Netherlands  
Pastoor Clercxstraat 26  
5465 RH Veghel  
Tel: +31 (0)413 376 599

industrial@exergen.com  
www.exergen.com