


MONITORING DANGEROUS CHEMICALS AND HAZARDOUS ENVIRONMENTS

Handling, processing, or storage of certain materials involves an element of risk of fire, chemical damage, or explosion. Many times these materials are monitored using pyroelectric, air temperature, or ultraviolet devices to detect a fire situation, in order to activate alarms and extinguishing systems. These devices do not, however, provide the earliest possible indication of a problem, because they cannot detect the initial heat prior to the fire.

The IRt/c, however, is capable of detecting even the smallest temperature rise which must occur before a fire starts, and transmit the information in as little as 80 milliseconds to the thermocouple monitoring device, thus providing the maximum time to initiate extinguishing or cooling measures. The wide field-of-view standard IRt/c can average a wide area for broad coverage of heat build-up, or the narrower IRt/c.3x, .5, and .10 models can

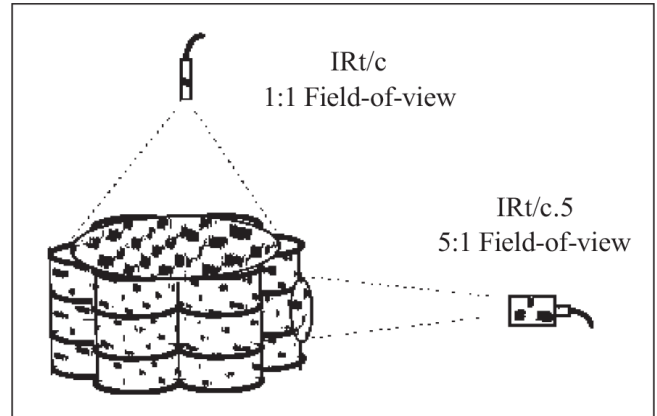

monitor specific areas from greater distances. Actual fire types and special conditions should be evaluated prior to applying IRt/c's.

As a "simple device" all IRt/c models are rated intrinsically safe (Tech Note #10), and as hermetically sealed devices meet or exceed all applicable NEMA ratings.

Exergen Corporation office:

USA
400 Pleasant Street
Watertown, MA 02472
Tel: +1 617 923 9900 press 4 for industrial
Fax: +1 617 923 9911

Exergen Industrial International/OEM Sales office:

Clever IR
The Netherlands
Pastoor Clercxstraat 26
5465 RH Veghel
Tel: +31 (0)413 376 599

industrial@exergen.com
www.exergen.com